
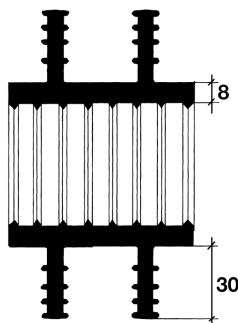


## DIMENSIONS AND INSTALLATION INSTRUCTIONS

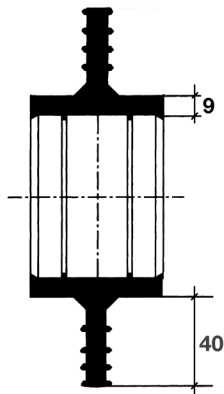

Outer diameter of pipe in mm	Clamping range	
	from outer diameter of pipe	to outer diameter of pipe
10	8	10
30 x 3,5 mm flat	-	-
32	29	32
40	38	42
50	48	53
63	60	64
75	71	80
90	84	92
110	105	116
125	120	130
140	135	148
160	154	166
180	175	190
200	195	210
225	215	230
250	245	260
280	275	290
315	310	327
355	350	365
400	395	410
450	440	460
500	495	515
560	555	580
630	625	650
710	705	735
800	795	830
900	895	930
1000	995	1030
1200	1195	1240
1400	1395	1450

Dimensions in mm (without warranty)

### INSTALLATION INSTRUCTIONS

1. Clean the pipe surface to be cast in concrete with a piece of cloth or something similar.
2. Slide the wall collar on the pipe to the middle of the concrete/masonry.
3. Attach the fastening straps:  
For wall collar up to  $\varnothing$  315: Fit one strap on each side of the flange  
For wall collar above  $\varnothing$  355: Fit one strap on each side of the flanges and one in between.
4. Put the fastening strap around the wall collar and insert the end of the strap into the slot of the turnbuckle.
5. Use a bolt driver or hexagon wrench to turn the turnbuckle to the right and then slightly press the locking device until it fits tightly.