



EN

INSTALLATION INSTRUCTION

Instruction for installation

Wall / ceiling and casing pipe have to be dry, dust and grease-free at the mounting area of the flexible seal.


1. Center and store casing pipe to core drilled hole.
2. Mark bore hole with help of pressure plate at the wall/ceiling. Drill out of center and insert dowel.
3. Apply sealant like showed on wall/ceiling.

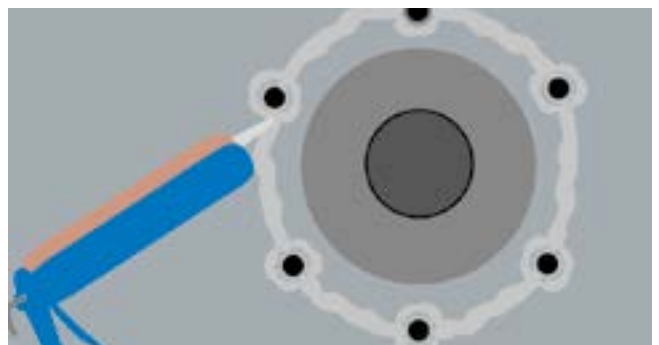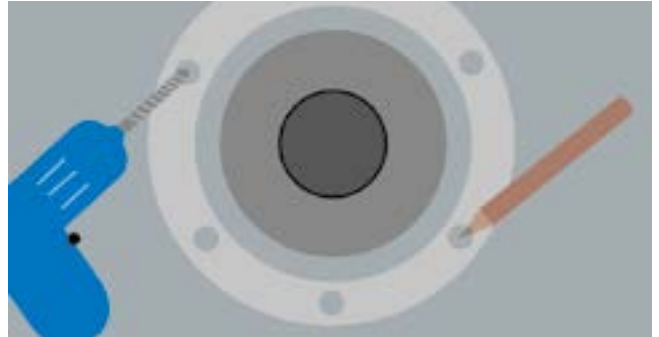


4. Pull open side (at the flange side) of the flexible seal over the casing pipe. Warp flexible seal with pressure plate against the wall/ceiling. Spread out sealant.



5. Collar of the flexible seal type VDW OD has to be adjusted until a stretching mark appears. Inject sealant under collar circularly and warp strap closely.

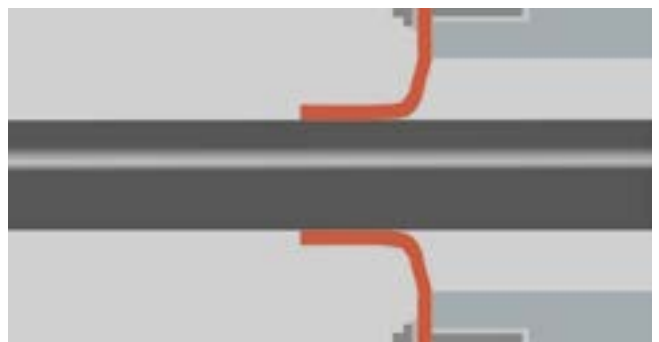

6. Collar of the flexible seal type VDW has to be adjusted until a stretching mark appears. Inject sealant under collar circularly and warp strap closely.

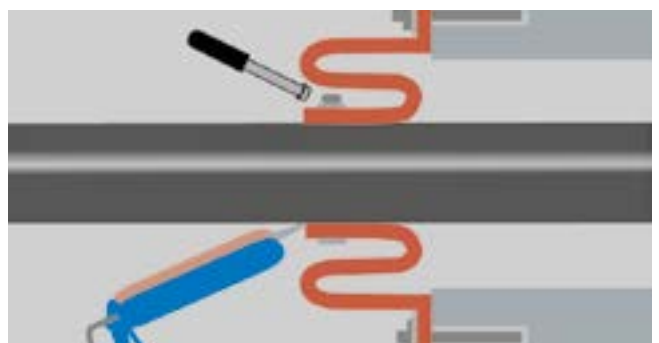

For laying underground the flexible seal has to be covered with a stretching cushion before filling to prevent flexible seal of earth burden. This allows the movement of the flexible seal.